# User Manual

## Valued Customer

Thank you for your purchase of the watch-phone that integrates a perfect full touch screen mobile phone into a fashionable and wearable design. With the watch-phone, you can make phone calls, play music, view text messages, etc.
Before operating this type of watch-phone, please read the instructions and suggestions below to ensure the best possible performance.

## Package Contents

- Watch phone
- Data line
- Earphone
- User Manual

## Safety Warning

- The illustrations in this manual are for reference only.
- Do not directly expose the watch for a prolonged time to extreme heat or cold which will damage the battery. Extreme heat for a prolonged time can under some circumstances cause the battery to expand.
- Do not attempt to repair the watch, for any modification to the product will affect the security of the product, and affect the warranty status.
- Avoid using the phone in the following environment: places with excessive temperature fluctuations, places with a temperature higher than 100° F or lower than 32° F, places with high pressure, dust, electrostatic interference, or high humidity.
- Avoid contact with corrosive cleaning agents and chemicals, please use a soft, dry cloth ONLY to clean the watch and screen (do not use liquids).
- This product can only be operated with specified batteries or power adapter, if different models are used, it may result in this product's warranty becoming invalid. Use only the original accessories recommended by the manufacturer.
- It is not recommended to use the watch at gas stations, restricted chemical plants, or near oil depots. For the use of the watch in the above environment may raise the risk of static fire/explosion.

**Warning:** When you are travelling on an airplane, please remove the watch and store in checked baggage, the manufacturer is not responsible for the damage caused by such radiation within full body scanners or x-ray machines.

## Instructions on handling electrical and electronic equipment

Should you wish to dispose of the watch after use, please send it and all other unwanted electrical or electronic equipment to a designated recycling center in your city. Do not discard with everyday waste. This measure provides environmental protection for our planet, for more details about proper electronic and electrical disposal, please contact the nearest recycling center in your city.

## Instructions on batteries & handling batteries

- Do not discard the watch battery with everyday waste. As a consumer, you are required to handle and dispose the used batteries properly.
- Note that if the battery's positive and negative directions, are opposite, it may cause damage to the device.
- It is prohibited to attempt to open the batteries or discard batteries into an open flame.
- The liquid flowing from the batteries is extremely toxic and dangerous, avoid contact.
- Never place the battery in the hands of children as it can also pose a choking hazard.
- Remove the battery from the device if you do not plan to use the watch for a prolonged amount of time. If the battery is left in the device for a prolonged time without use, it can cause damage to the internal parts of the watch.

## Product Details

1、Power switch
2、Camera
3、Display
4、Speaker / Microphone
5、Micro USB port

## Initial preparation for the first time using the watch

Be careful to disassemble your watch and accessories apart, after disassembling, place the phone screen face down, and open the back cover of the phone, then open the card slot based on the direction indicated by the identification of SIM card slot, and then lock the SIM card according to the direction shown by the identification after placing SIM card in the slot. When the SIM card is secured in place, please correct the golden contact point of the battery, and gently place the battery into it, and then close the back cover and gently press it down into its place.

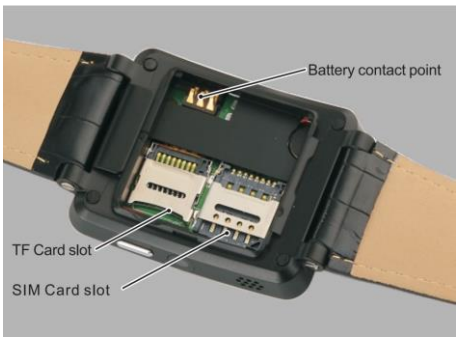


## Charging

The battery should be fully charged before initial use of the watch phone.

## Basic Operation

Your watch is a mini touch-screen phone on which you can perform routine settings and select functions.

- Each function (main menu) will be shown and displayed on multiple screens after the phone is switched on, and other functions can be viewed by sliding the screen left or right with the swipe of your finger.

- In the course of operating the phone, you can return to the previous interface by sliding screen right, and return to main menu by long press of the screen.

• You can press the power switch to switch to clock mode in any interface; you can switch to clock mode in the interface of main menu by long press of the screen. You can switch from clock mode to main menu by long press of the screen.

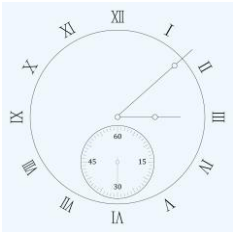

**Warning:** Touch the screen with your fingers or a special capacitive stylus when using the touch screen. Avoid use of sharp objects, for sharp objects may damage the touch screen.

### Power on

A long press of the power switch for 3 seconds until the screen displays.

### Power off

In the main menu, long press the power switch for 3 seconds until the screen disappears.

### Date & Time Settings

During the first initial use, you should set up the time and date. The city where the phone is located, as well as the time and data and other items can be set.

**Warning:** Time should be reset in the case that the battery has been removed and then replaced.

### Lock Screen

You can lock the screen in any interface by 1 short press of the power switch.

### Bluetooth Connection

In the main menu, click to enter, select “Power on” to turn on Bluetooth; select “my device” and select your Smartphone Bluetooth from the Bluetooth devices to be connected.

You can also use Smartphone to connect to Bluetooth watch: Turn on your Smartphone Bluetooth, have it set to “visible to all nearby Bluetooth devices” (If your Smartphone does not have this option, it’s not needed), select “Hi Watch” from the list and connect to it.

### Basic Functions

You can dial phone numbers on the device, or dial the number with Bluetooth connected with your actual smart phone. The phone numbers can be saved in SIM card or phone.

**Dial:** Click in the main menu to enter the dialing interface, and enter the number by clicking the numbers on dialing interface, if you enter the wrong number, please click to delete previous input, and click the dial button at the bottom of the screen after completely entering the number to make a phone call (You can choose to dial by Bluetooth or this device).

**Answering and rejecting calls:** When there is an incoming call, you can click the Answer button in green at the bottom of the screen to answer the call. You can also click the red button to reject the call if you choose to.

**Message:** This function provides short message service, thus you can receive or send out text messages. When the icon of SMS status appears on the screen, it indicates that you have received a new message.

Firstly install our SMS APK (you can scan our QR code at the last page then choose KW300 to download the APK) into your smartphone or download the APK from our website directly, install this APK and click “Bluetooth connection”, choose the KW300.

The watch will get a request to confirm, confirm it then finish the SMS Synchronization.

PS: This SMS Synchronization only support Android phone, but as there are too many different version of Android phone in the world, some models may not apply to this product.

**Phone calls:** Basic operations of the watch phone are the same with those of common touch-screen mobile phones.

**Bluetooth calls:** When appears, it indicates that that the watch has been connected with the smart phone. You can make a call by this device or by Bluetooth. When appears, it indicates that it has not been connected, and you can only make a call using the watch. At that moment, you can turn on your Bluetooth, and select the Bluetooth from the Bluetooth devices to be connected (please refer to the “Bluetooth Connection” section of this manual for further assistance).

**Music Player:** The music from your mobile phone can be played on your watch after the Bluetooth connection with your smart mobile phone is made.

**Audio:** You can also listen to the music via earphones by plugging in earphones to the watch’s earphone jack (Standard Micro USB port).

**Clock Display:** In the interface of main menu, press down the power switch quickly or long press the screen to switch to clock mode. When the phone is in clock mode, please gently touch the screen, then Left and Right arrows appear, and different clock interfaces can be set by clicking Left or Right arrow.

**Pedometer** The smart watch can also be used as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as number of steps, distance, speed, time, etc., to control exercise.

**Remote burglar** The watch will automatically disconnect from your smart phone and send out alarm when the native machine is taken away from the connected phone for more than 32 feet.

**Remote remind** When there is an SMS, or incoming messages from other applications on the connected phone, the watch phone will alert you to read them.